


3. Operating Instructions


3-1 Features (CM-1819 / CM-1419)

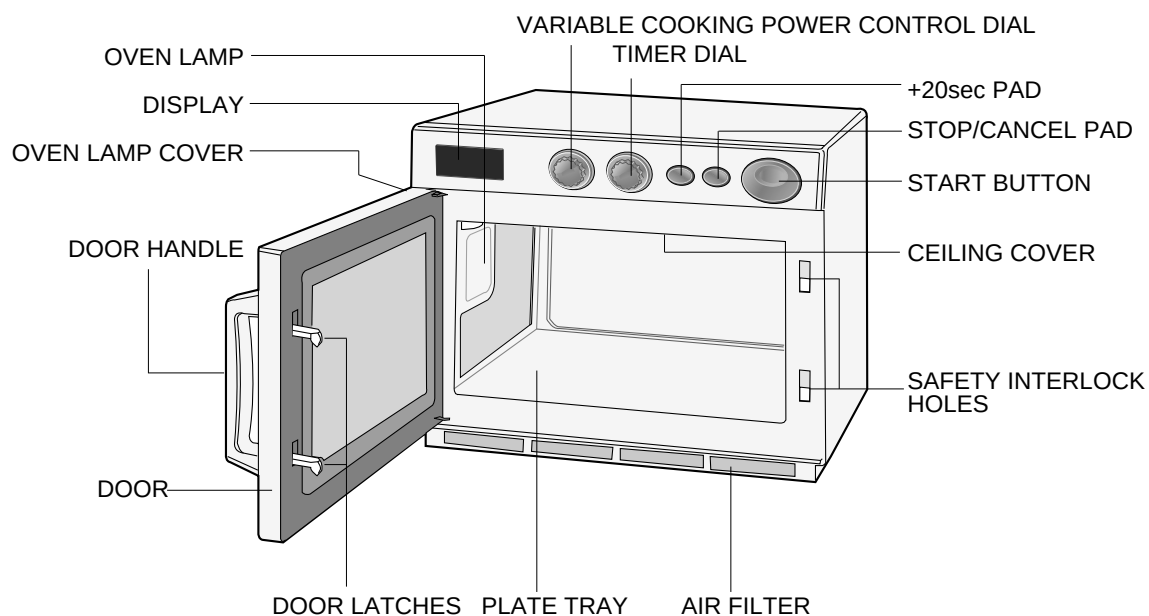

3-2 Features (CM-1829 / CM-1429)

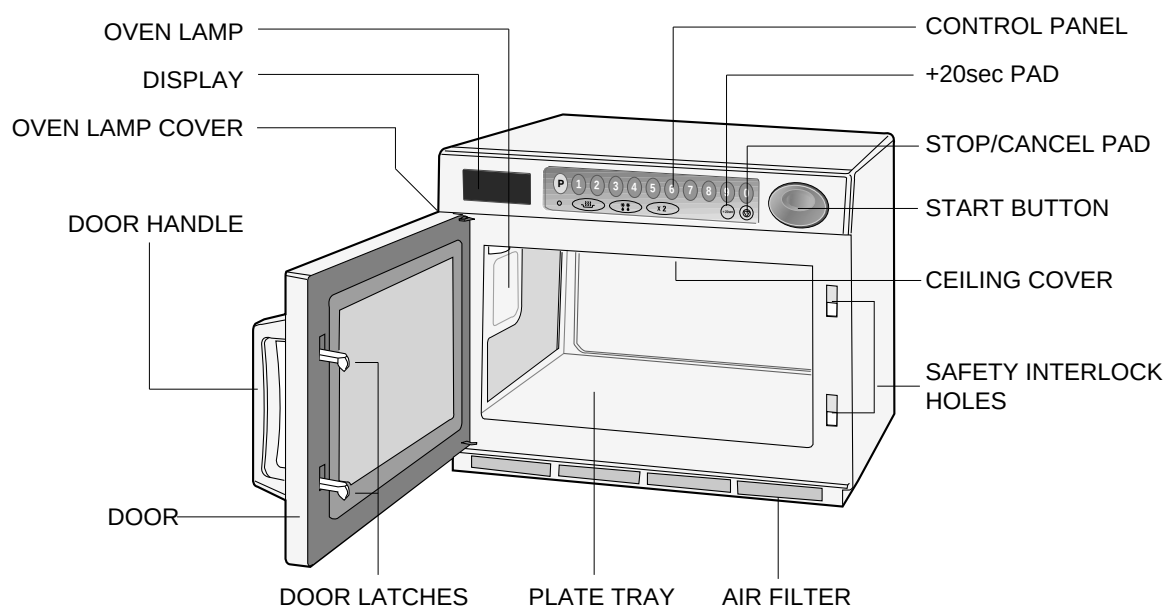


3-3 Control Panel (CM-1829 / CM-1429)

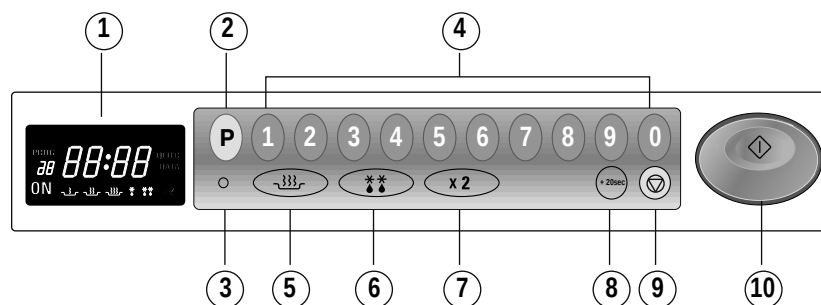


1. DISPLAY
2. PROGRAM PAD
3. PROGRAM LOCK PAD
4. NUMBER PADS(TIME, MEMORY PROGRAMMING)
5. POWER LEVEL SELECTOR PAD
6. DEFROST SELECTOR PAD
7. DOUBLE QUANTITY PAD
8. +20sec PAD (ONE TOUCH COOK PAD)
9. STOP/CANCEL PAD
10. START BUTTON

3-4 External Views (CM-1819 / CM-1419)

3-4-1 External Views (CM-1819 / CM-1419)

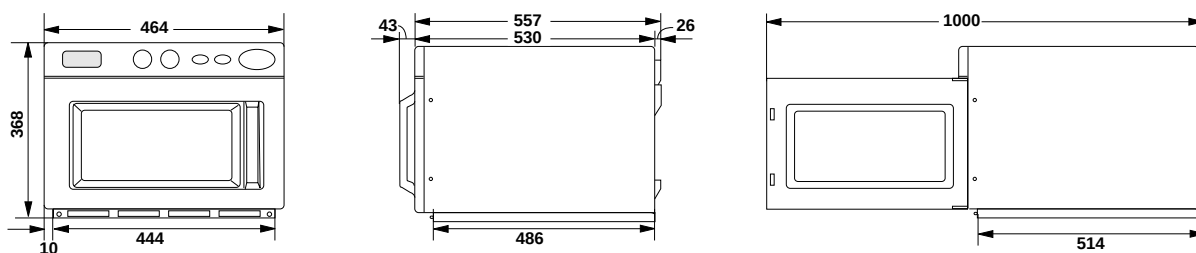


3-4-2 External Views (CM-1829 / CM-1429)

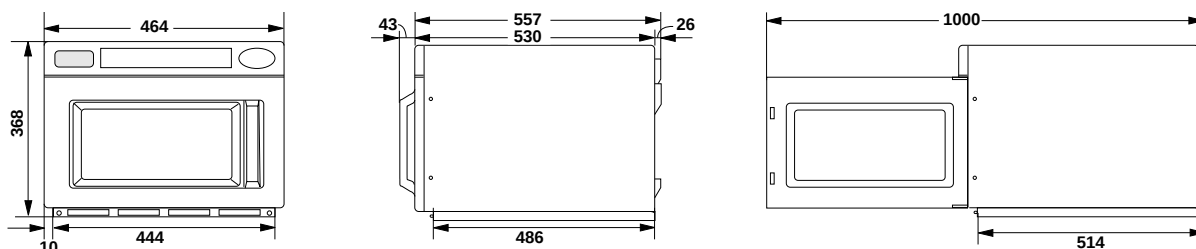

3-5 Operation Guide (CM-1819 / CM-1419)

Cooking/Reheating

1. Make sure the oven is plugged into a properly earthed electrical outlet and 'ON' appears in the display window.
2. Open the door.
The oven lamp will be turned on.




3. Put the food into a suitable container, place it in the center of the oven and then close the door securely.
Result: The oven lamp will go off.
4. Select the desired power level by rotating the COOKING POWER CONTROL DIAL.
Result: The selected power level will be displayed in the display window.




5. Set the desired heating time by rotating the TIMER DIAL.
Result: "ON" blinks and the selected time is displayed in the display window.



6. Press  pad:
Result: The oven lamp and cooling fan will be turned on.
Heating will start.
The time on digital display will count down.



7. When all time is elapsed, the end of cycle Beep Tone will sound 4 times and all heating will stop. The oven lamp will go off. For 1 min, the display shows  and the cooling fan will keep working in order to cool down the interior parts. During the time, the fan will not stop even when you open the door. 1 min later it will stop and ON appears again. Food may be removed from oven whilst the fan is still running.



8. Open the door and take the food out.
9. Close the door. The oven lamp will go off.

NOTE: Whilst heating, one press on  pad stops the oven. You can restart it by pressing the  pad or a second press on  pad will cancel the selected program. When it is NOT in a heating cycle, one tap on  pad cancels the selected program. You can set the power level first and then the cooking time next, or vice versa. You can press +20sec button one or more times in order to add the cooking time by 20 seconds.

3-5 Operation Guide (CM-1819 / CM-1419 continued)

To stop the cooking

You can stop cooking at any time so that you can:

- Check the food
- Turn the food over or stir it
- Leave it to stand

* Temporarily ; Open the door or press  button once.

Result: Cooking stops. To resume cooking, close the door and press  again.

* Completely ; Press the  button twice.

Result: The cooking settings are cancelled.

If you want to cancel any cooking settings before starting cooking, simply press  once.


Using the Defrost Feature

The Defrost feature enables you to defrost meat, poultry, fish.

NOTE: Only use containers that are microwave-safe.

1. Open the door.
2. Place the frozen food in the centre of the plate tray.
3. Close the door.
4. Rotate the Variable Cooking Power Control dial to the DEFROST HIGH() or DEFROST LOW() as you wish.


Result: The DEFROST indicator appears on the digital display.



5. Rotate the TIMER dial to set the defrosting time.
The Maximum time that can be set under defrosting mode is 50min.



6. Press  button.
Result: Defrosting begins.



3-5 Operation Guide (CM-1829 / CM-1429)

Cooking/Reheating

NOTE: When you first plug in the power cord, the oven beeps once and all the indicators show for 5 sec in the display window.


NOTE: When heating cycle is completed and you open the door, the oven lamp automatically turns on and goes off 1 min later.

NOTE: When you open the door whilst in a heating cycle, the oven stops operating and the oven lamp automatically turns on for 1 min and goes off 1 min later. If you leave the oven door open for more than 1 min, the oven beeps once every minute and after 5 min the power source check indicator 'ON' appears in the display window.

This oven is preset at the factory for automatic operation.

1. Make sure the oven is plugged into a properly earthed electrical outlet and 'ON' appears in the display window.

2. Open the door.
The oven lamp will be turned on.



3. Put the food into a suitable container, place it in the centre of the oven and then close the door securely.
Result: The oven lamp will go off.


4. Select the desired power level by pressing the Power Level Selector pad.
Result: The selected power level will be displayed in the display window.



5. Set the desired heating time by pressing the Number pads.
Result: The selected time is displayed in the display window.



6. Press START button:
Result: The oven lamp and cooling fan will be turned on. Heating will start. The time on digital display will count down.



7. When all time is elapsed, the end of cycle Beep Tone will sound 4 times and all heating will stop. The oven lamp will go off. For 1 min, the display shows *0* and the cooling fan will keep working in order to cool down the interior parts. During the time, the fan will not stop even when you open the door. 1 min later it will stop and 'ON' appears again. Food may be removed from oven whilst the fan is still running.
8. Open the door and take the food out.
9. Close the door. The oven lamp will go off.

3-5 Operation Guide (CM-1829 / CM-1429 continued)


Using the Defrost Feature

NOTE: When the oven was operating for longer than 25 min under Defrosting cycle, you can NOT change the power level from Defrosting to Heating(Cooking/Reheating) mode.

NOTE: The oven is designed not to work when power level is set to '0' mode between the heating mode and the defrosting mode.

* Use only containers that are microwave-safe.


1. Open the door.
2. Place the frozen food in the centre of the plate tray.
3. Close the door.
4. Press the Defrost selector pad to set DEFROST HIGH (**) or DEFROST LOW (*) as you wish.
Result: The selected DEFROST indicator appears in the display.



5. Press the Number pads to set the defrosting time. (Max. 50 min)



6. Press  button.
Result: Defrosting begins.



NOTE: It is not possible to set a defrosting time for longer than 50min. The defrost indicator will flash and it is advisable to press CANCEL and enter a new defrost level and time.

Repeat Feature

You can repeat the previous cooking setting (regardless of manual or automatic memory heating) by pressing the START button. The oven starts with exactly the same heating time and power level that were used in the last operation.

NOTE: Repeat feature does not support for +20sec pad. The repeat feature will be cancelled once the power source is cut off.

Using +20sec Pad

This is a ONE TOUCH COOK pad.

By touching the +20sec pad once, you can start heating instantly.

You can increase the cooking time by pressing the +20sec pad while heating is being done.

A cooking time increases by 20 seconds at each press on +20sec pad. But it can not exceed the maximum time. Like traditional cooking, you may find that, depending on the food's characteristics or your tastes, you have to adjust the cooking times slightly.

Before operating the oven, times can be increased/decreased using either the time pads or +20sec button. During the operating, time may only be added by using the +20sec button.


3-5 Operation Guide (CM-1829 / CM-1429 continued)

Memory Pads Programming


1. Hold down PROGRAM LOCK pad and then press PROGRAM pad. Hold together for 2 sec.

Be sure to press the pads firmly.


Result: PROG indicator appears in the digital display.



2. Press appropriate NUMBER pad for the desired memory number.
Result: Selected memory program code appears below the PROGRAM indicator.




3. Select power level by pressing the POWER LEVEL pad.
Result: Default power level HIGH appears in the display at first press of the POWER LEVEL pad.
Press the POWER LEVEL pad one or more times until you get the desired power level.



4. Press NUMBER pads to set the cooking time.
Result: The maximum time according to each cooking power level can be referred to in the title "Power Levels and Time Variations" on page 12~13. The NUMBER pads will not operate or respond when you press a cooking time exceeding the maximum value.

NOTE: It is not possible to set a cooking time for longer than the maximum time allowed on the chosen program. The power level indicator will flash and it is advisable to press CANCEL and to enter a new power level and cooking time.



5. Hold down PROGRAM LOCK pad and then press PROGRAM pad. Hold together for 2 sec once again.
Result: PROG indicator and memory number indicator blink 3 times in the digital display with a beep sound. And then the display goes blank.

Caution: Be sure to press the pads firmly in the right position.




6. When you want to program more, repeat the procedures above again.
Memory programs are available up to 30 items. Make sure the unit is properly programmed.
After programming is finished, all you have to do for memory cooking is to press the NUMBER pad. Then the selected memory program automatically starts cooking.

3-5 Operation Guide (CM-1829 / CM-1429 continued)

How to Operate Memory Cooking

After having finished memory programming, just press the NUMBER pad of the memory number you want to select. The oven will automatically start heating according to the pre-programmed cooking time and power level after a short delay (5 sec).

1. Make sure the oven is plugged into a properly earthed electrical outlet and 'ON' appears in the display window.
2. Open the door.
The oven lamp will be turned on.



3. Put the food into a suitable container, place it in the centre of the oven and then close the door securely.
Result: The oven lamp will go off.
4. Press NUMBER pad.
Result: After 2 seconds, the selected memory program automatically starts heating.

Stopping the Cooking

You can stop cooking at any time so that you can:

- Check the food
- Turn the food over or stir it
- Leave it to stand

To stop the cooking;

- * Temporarily: Open the door or press  pad once.

Result: Cooking stops. To resume cooking, close the door and press  again.

- * Completely: Press the  pad twice.

Result: The cooking settings are cancelled.

If you want to cancel any cooking settings before starting cooking, simply press CANCEL pad once.

3-5 Operation Guide (CM-1829 / CM-1429 / CM-1819 / CM-1419)

Power Levels and Time Variations

The power level function enables you to adapt the amount of energy dissipated and thus the time required to cook or reheat your food, according to its type and quantity. You can choose between the power levels below.

Power Level	Percentage	CM-1819/1829	Percentage	CM-1419/1429
HIGH()	100%	1800 W	100%	1400W
MEDIUM()	70%	1260 W	70%	980W
LOW()	50%	900 W	50%	700W
HIGH DEFROST()	20%	360 W	25%	360W
LOW DEFROST()	10%	180 W	13%	180W

You cannot set the cooking time longer than maximum value allowed to each specific power level. (see below.)

Power Level	Max. Time
HIGH	25 min.
MEDIUM	40 min.
LOW	40 min.
HIGH DEFROST	50 min.
LOW DEFROST	50 min.